



P115

A100, A101, A102, A112, A115, A116
AM100, AM101, AM102, AM112, AM115, AM116
C100, C101, C102, C200, C201, C202, C212

A06 ■ A06E


A93

A07


A94

A02 ■ A03


A2000 ■ A05

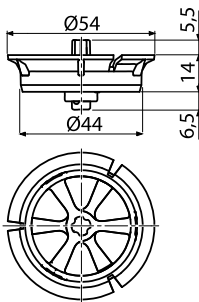

[mm]

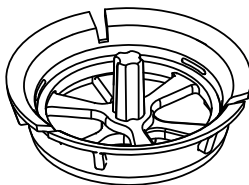

1 NASTAVENÍ ■ NASTAVENIE ■ УСТАНОВЛЕНИЕ ■ SETTINGS ■ DIE EINSTELLUNG ■ BEÁLLÍTÁS ■ IREGLEARE ■ USTAWIENIE

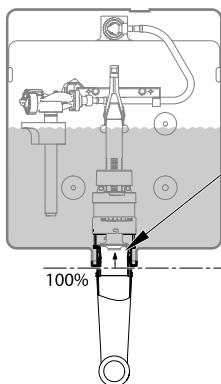

cca 95%

A

cca 85%





B

cca 75%

C

cca 65%



D

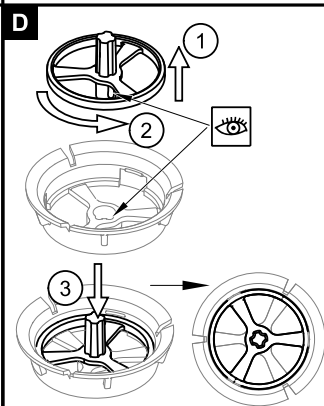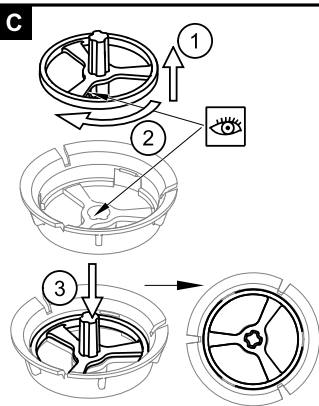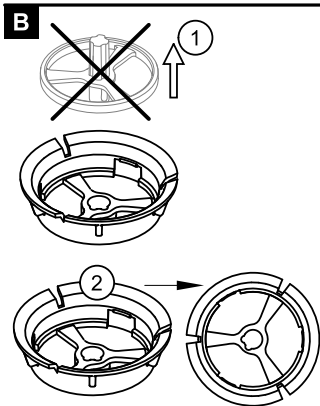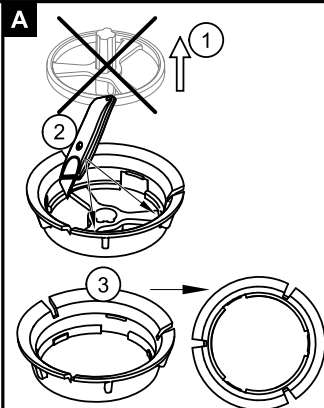






2 A

INSTALACE ■ INŠTALÁCIA ■ УСТАНОВКА ■ INSTALLATION ■ TELEPÍTÉS ■ INSTALARE ■ INSTALACJA



A100, A101, A102
A112, A115, A116
AM100, AM101, AM102
AM112, AM115, AM116
C100, C101, C102
C200, C201, C202, C212

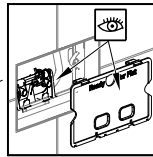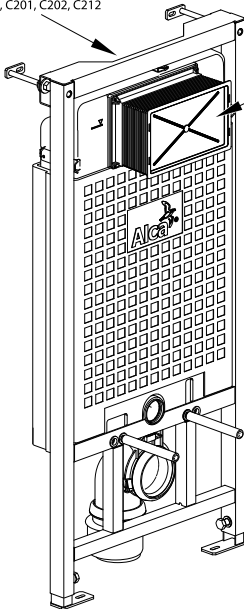


 

~~SLIM~~
~~A1101B, AM1112B, A1115B~~
~~AM1101B, AM1112B, AM1115B~~

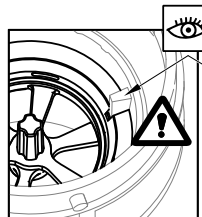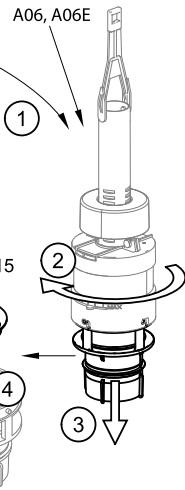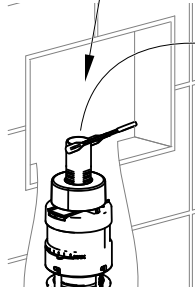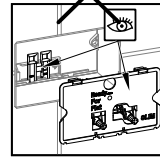

2 B

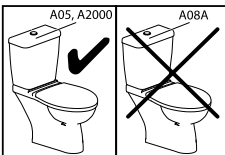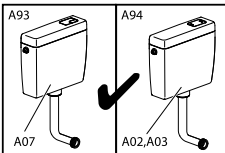

A02, A03, A07,
A2000, A05

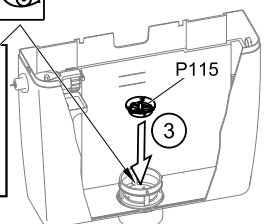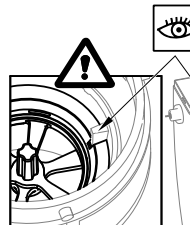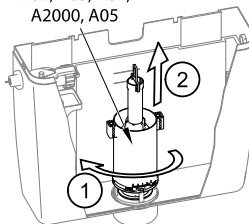

Alca plast, s. r. o.
Bratislavská 2846, 690 02 Břeclav, Česká republika
Tel.: +420 519 821 117 – prodej ČR
Tel.: +420 519 821 041 – export, Fax: +420 519 821 083
e-mail: alcaplast@alcaplast.cz, www.alcaplast.cz