
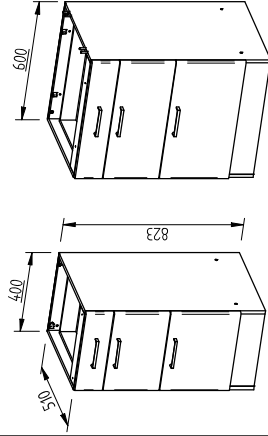
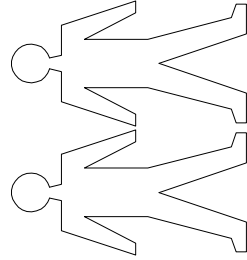
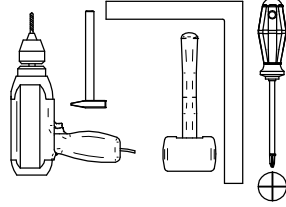


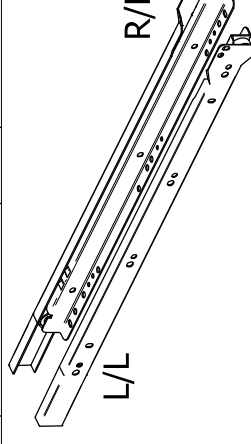



NOVA

S 40,60 3Z


NO9 Ed.1




1	2			3		x3
4	5			6		$\varnothing 15$ x4
7	8			9		M4 x6
10	11			12		x2
14	15			20		x3
16	17					
18	19					

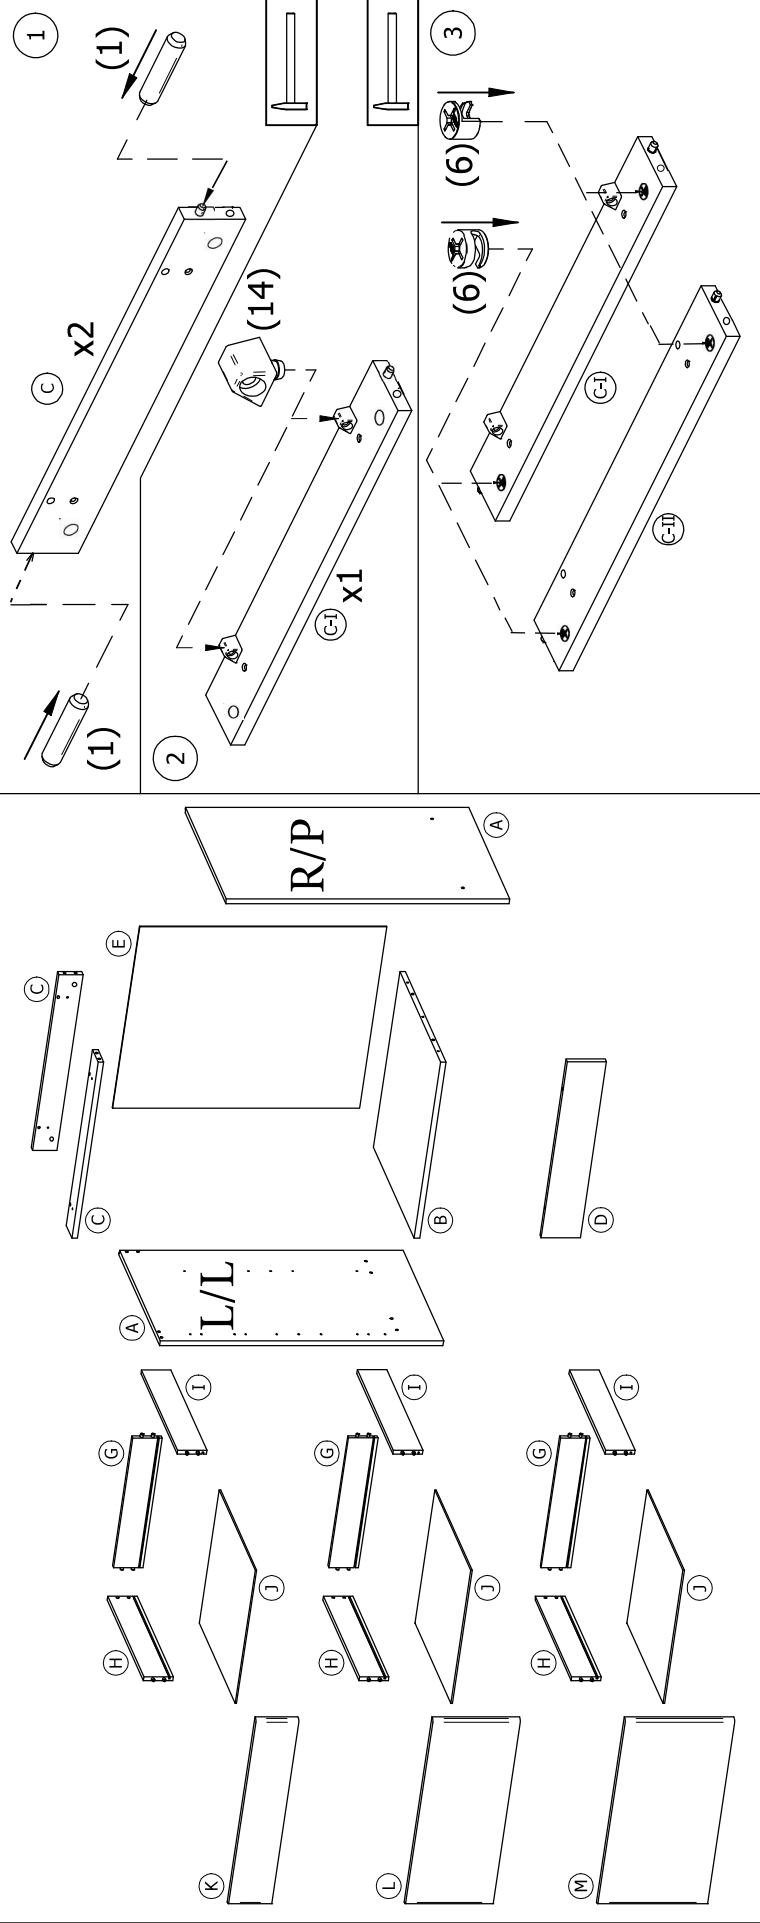


5

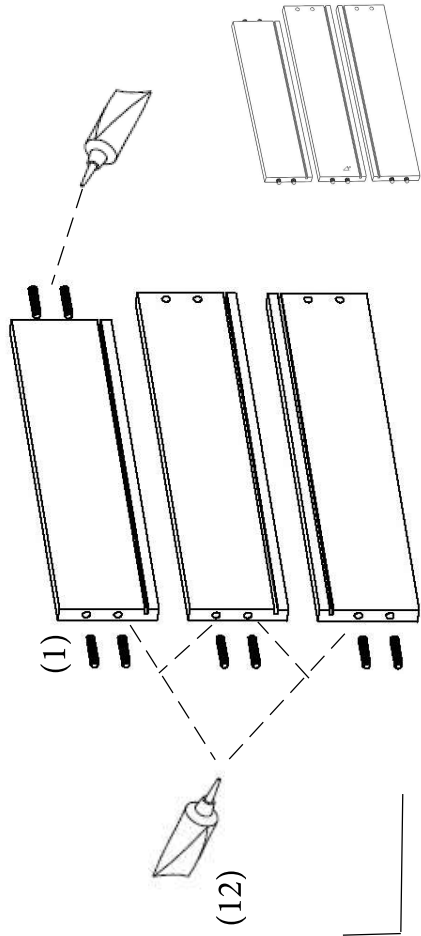


4

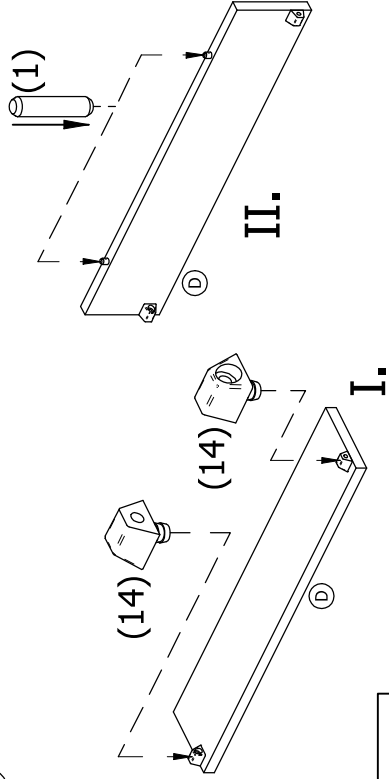


6

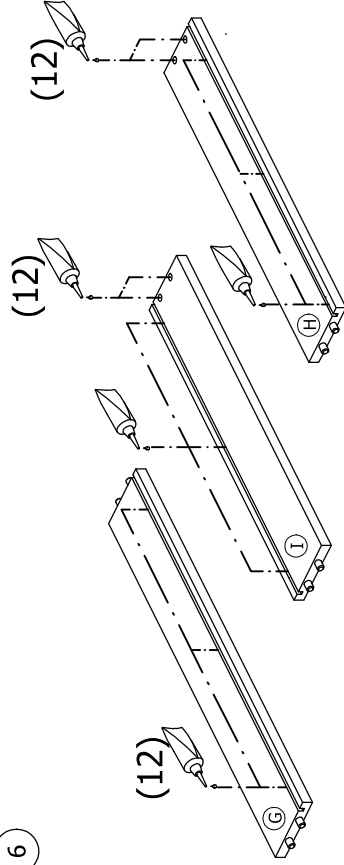


9

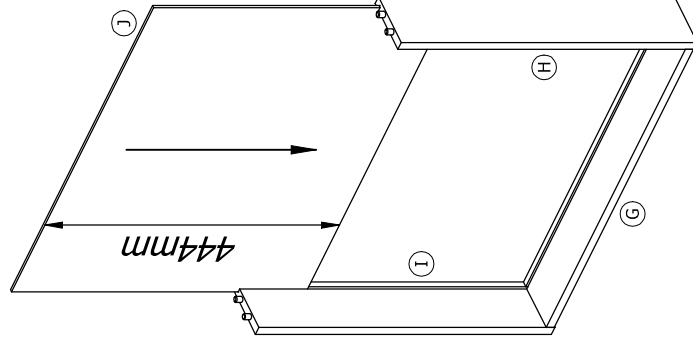


10

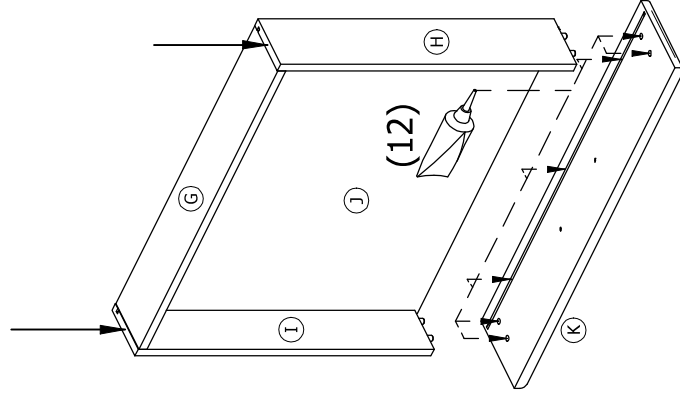







7

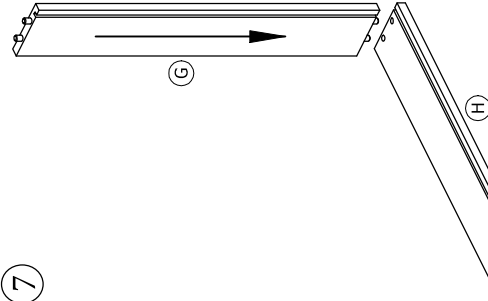


8

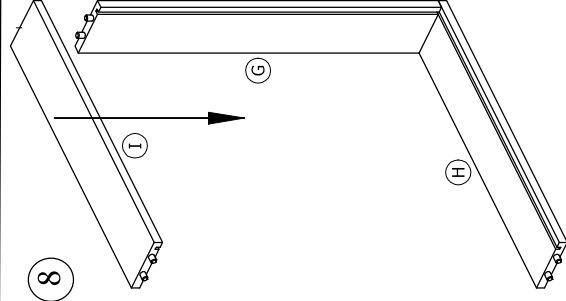







10


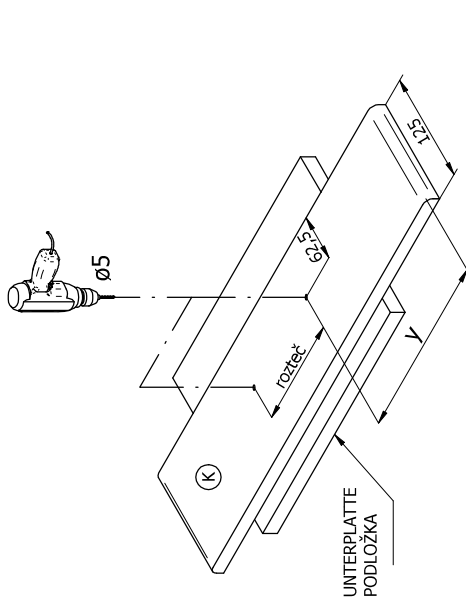
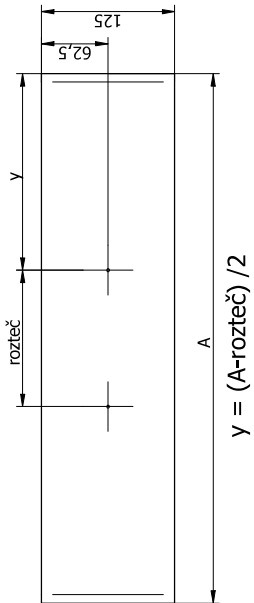
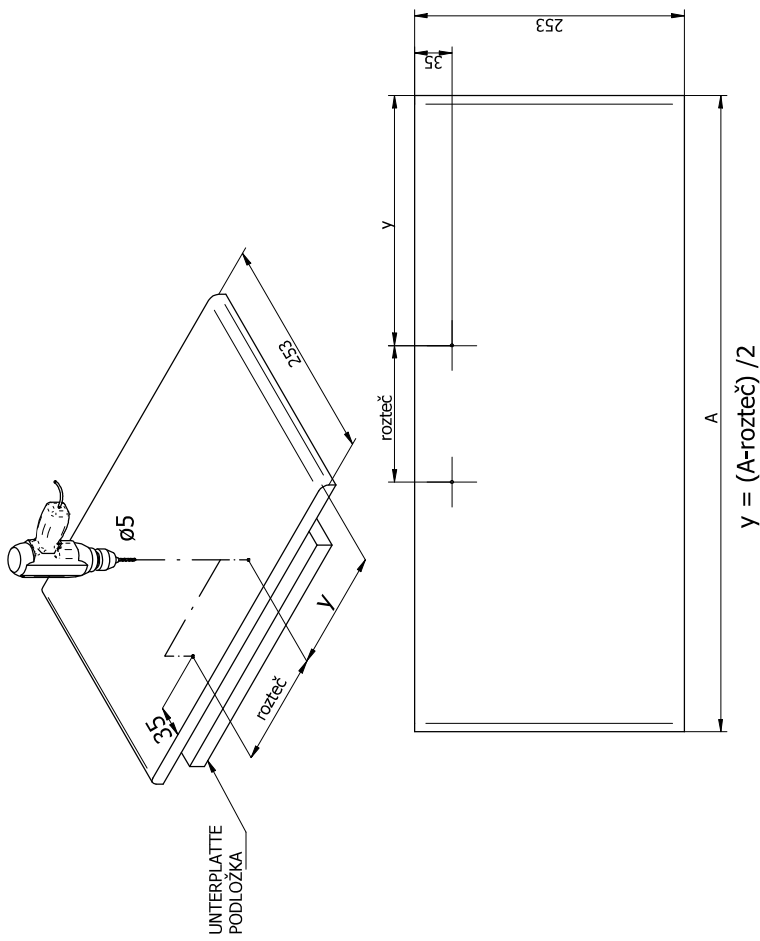
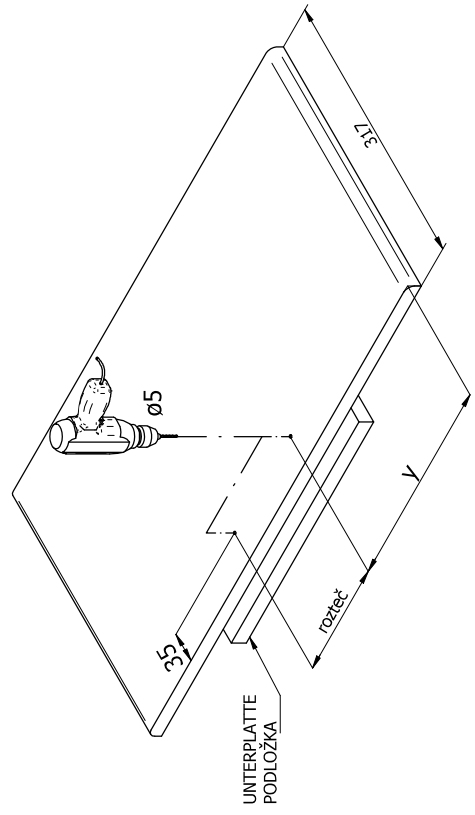
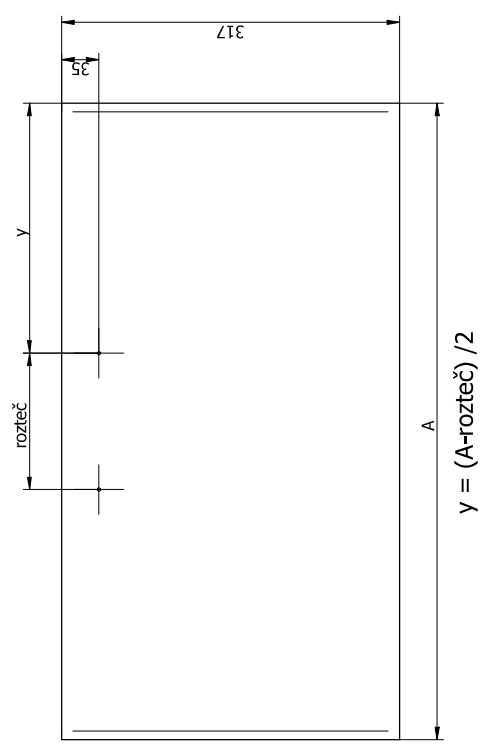




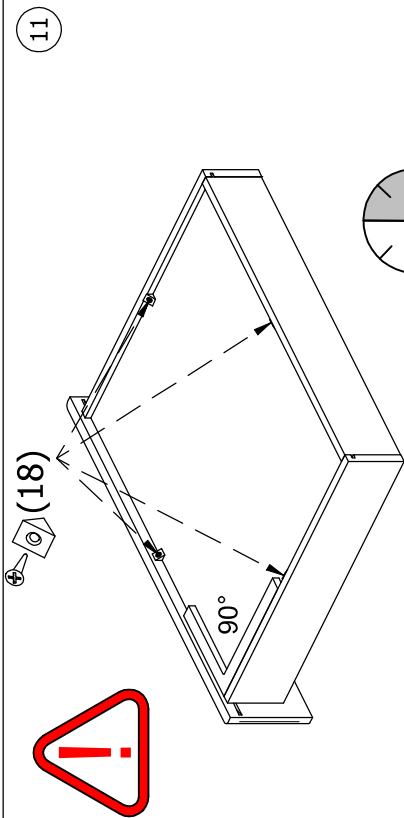


**ACHTUNG!!!
POZOR!!!**

SCHUBLADENZARGEN ENTFERNEN
UND VERLEIMEN!
KORPUS ZÁSUVKY MUSÍ BYT ZGLEJENÝ!
KORPUS ZÁSUVKY MUSÍ BYT SLEPENÝ LEPIDLEM!

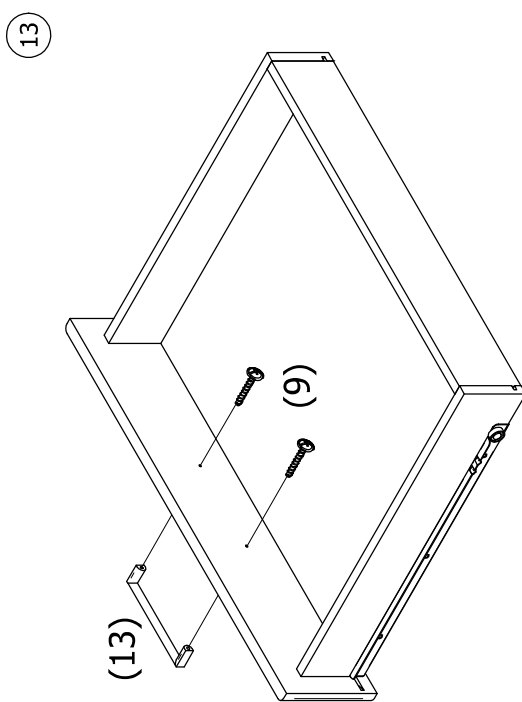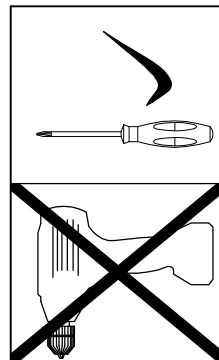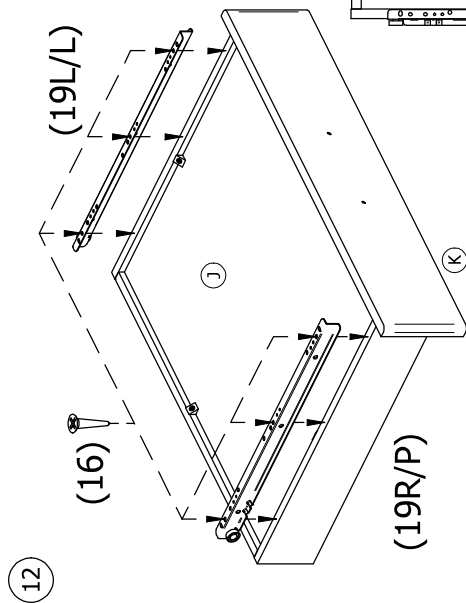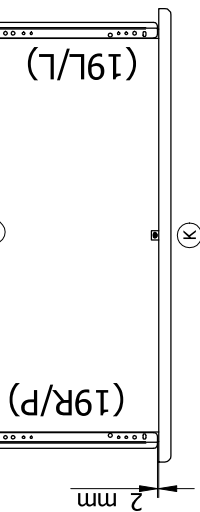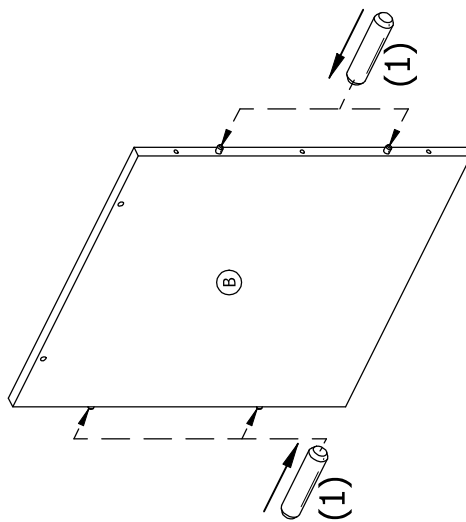

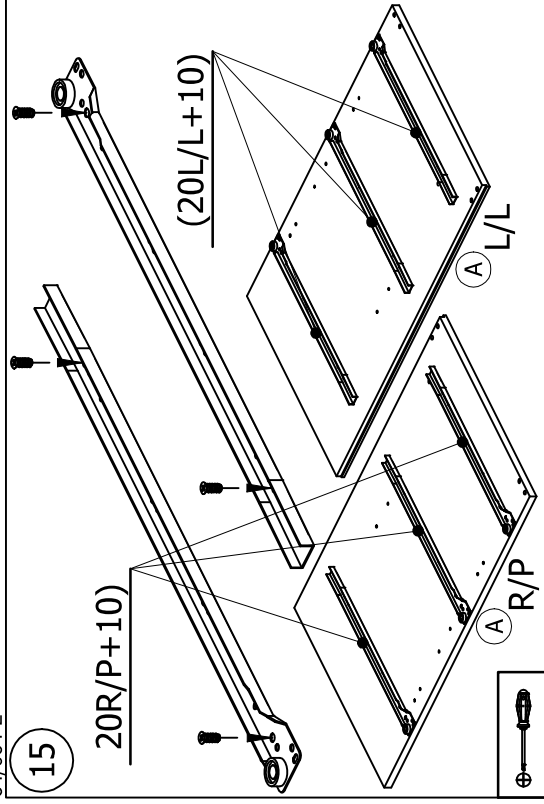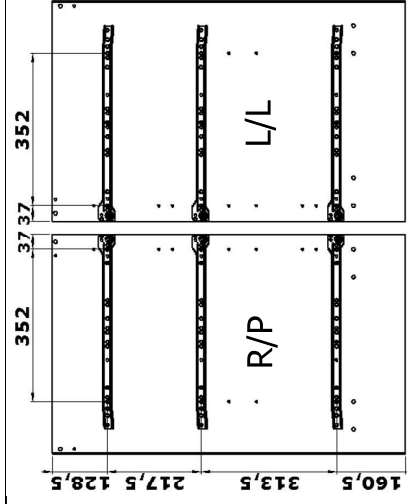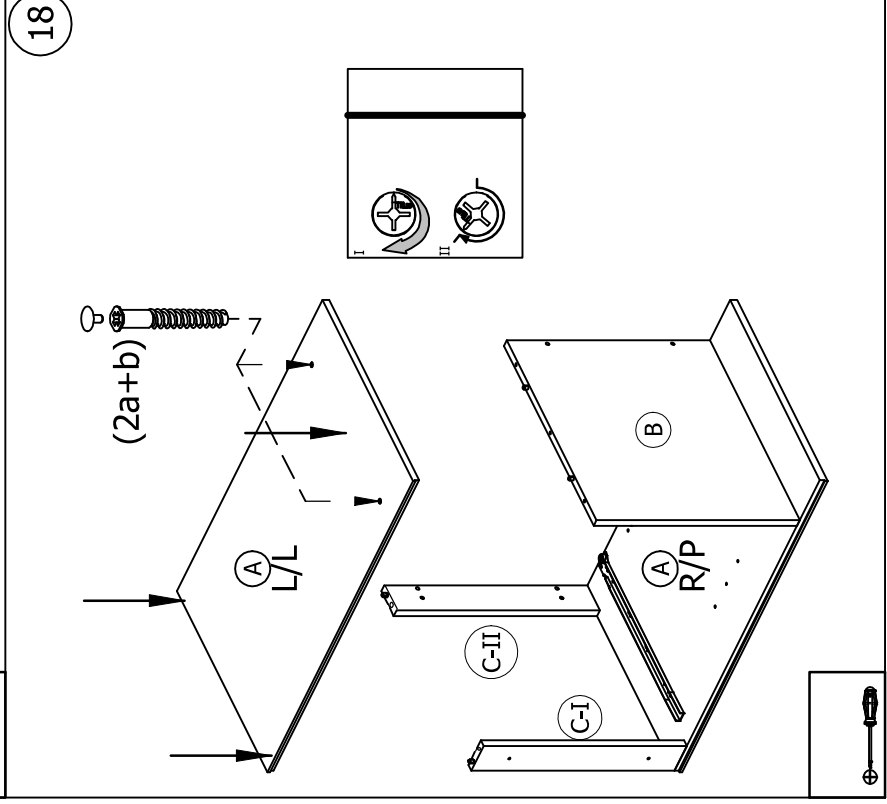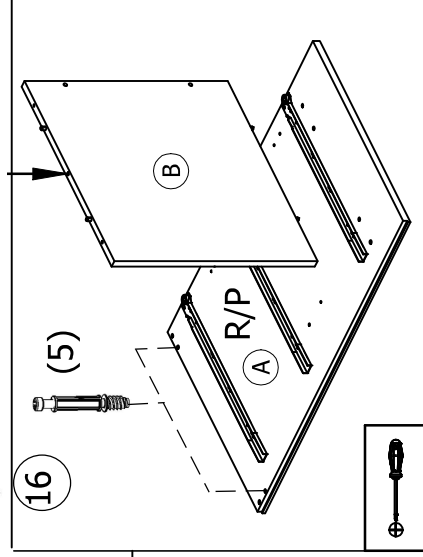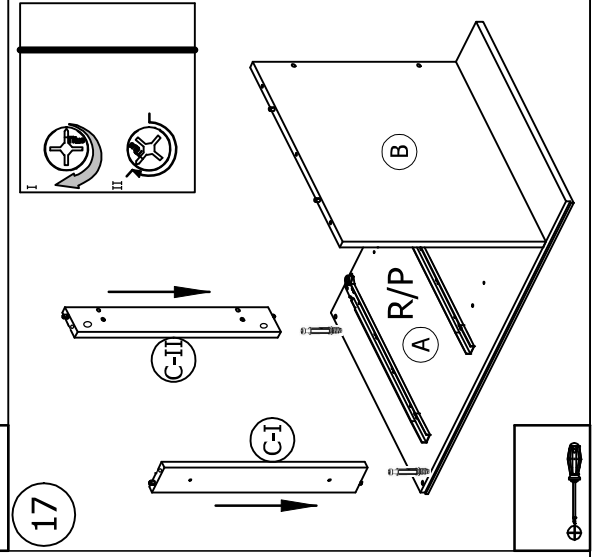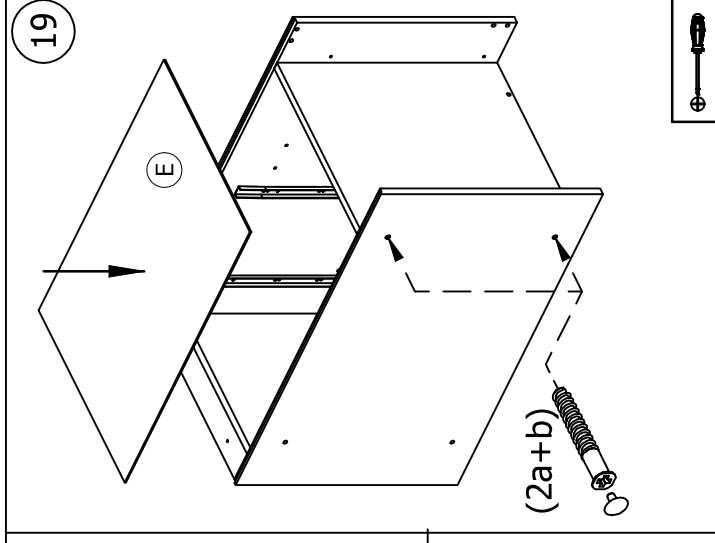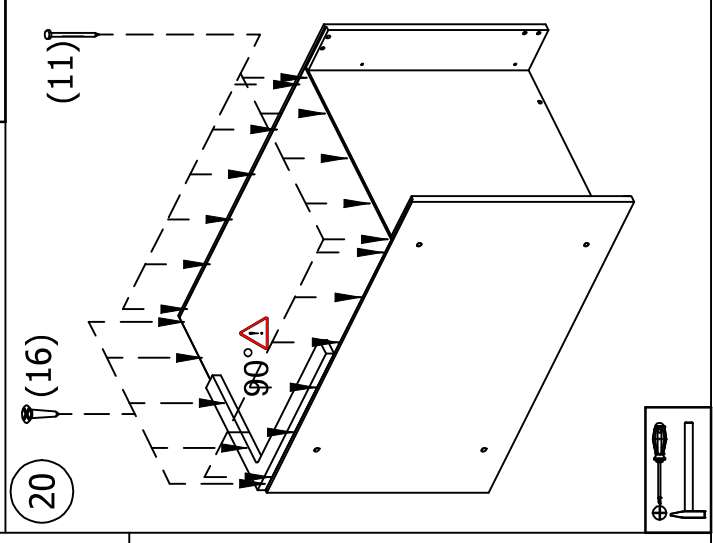

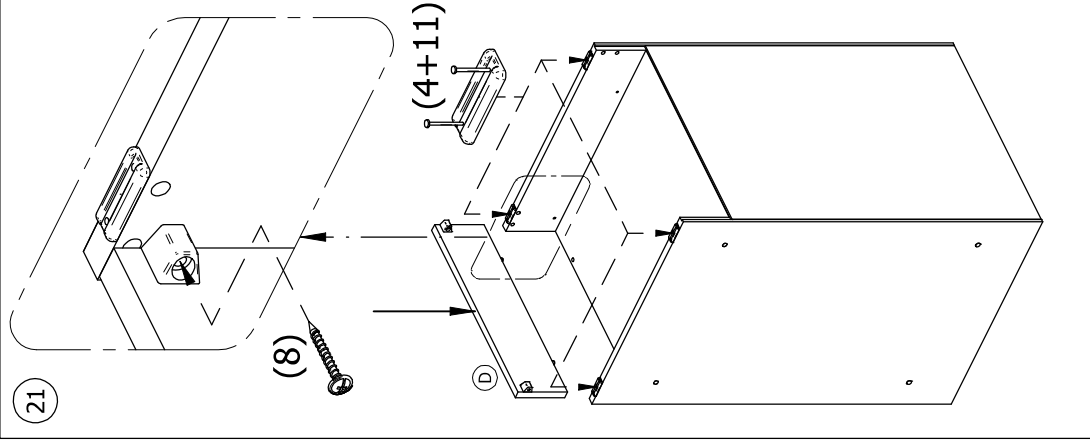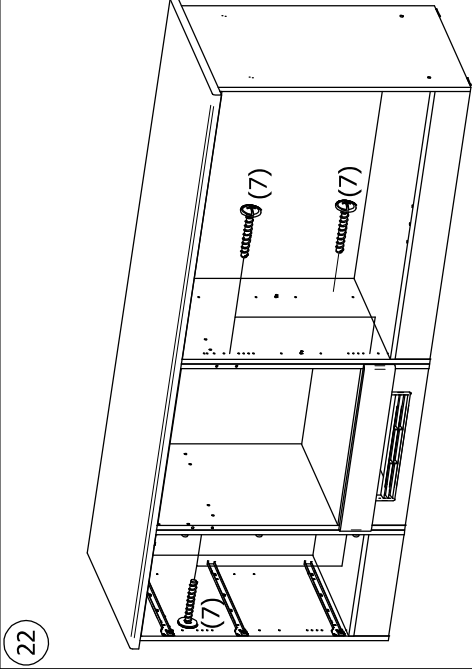

DIE POSITIONIERUNG DES VERBINDUNGSBESCHLAGS Nr.7 INDIVIDUAL
WAHLEN DER POSITION DES NEBENSCHRAKES UND INNENAUSTAATTUNG
DES SCHRANKES(TÜREN BÖDEN SCHUBLÄDEN) NACH.
UMLESTNENIE SPOJOVACIEHO KOVANIA Č.7 VYBERAJTE INDIVIDUÁLNE,
PODĽA UMÍSTENIA SUSEDNESKRINKY A PODĽA VNÚTORNEHO VYBAVENIA
(DVERE,POLICE,ZÁSUVKY).
UMÍSTENÍ SPOJOVACÍHO KOVÁNÍ Č. 7 VYBÍREJTE INDIVIDUÁLNE, PODLE UMÍSTĚNÍ SOUSEDNÍ
SKRINKY A PODLE VNITŘNÍHO VYBAVENÍ (DVERE,POLICE,ZÁSUVKY).

